

How to Fix a Timer Knob That Falls Off Intermittently

Tools Needed: Scotch tape, a paperclip or toothpick



Cut out a small, thin sliver of tape. Stick it to one side of the bisector in the end of the knob. Then, use the paperclip to fold it over the bisector and adhere the tape to the other side of the bisector.



That is all there is to it! If your timer switch is broken, check out our other guides for replacing it.

