

# Encore & Virtuoso

**Step 1:** Lift the grinder out of the box by grabbing the hopper and pulling straight up. Then remove the bag. Rotate the hopper all the way counter-clockwise and remove the hopper to allow removal of cardboard “collar”. Replace the hopper and twist clockwise.

**Step 2:** Open the grounds bin to find the timer knob. Press the timer knob in place while wiggling until it is fully seated.

**Step 3:** Rotate the hopper to adjust the grinder to your desired setting. Below are some general starting points:

Espresso	Drip & Pourover	Full Immersion
2–6	<i>Brewer</i> 13–14	<i>AeroPress</i> 8–11
	<i>V60</i> 13–14	<i>Siphon</i> 14
	<i>Chemex</i> 20–21	<i>French Press</i> 30–32

Note that these are just starting points; you will need to dial in the grind to your preference from here. For additional information on grind settings and brewing methods go to the support tab at [www.baratza.com](http://www.baratza.com)

**Step 4:** Add the beans and grind your coffee. Any grind adjustment to the grind setting should be made while grinding coffee. If you think your grinder is not performing correctly, go to our troubleshooting guide at [www.baratza.com/troubleshooting](http://www.baratza.com/troubleshooting). If you have further questions or need support:

- In US and Canada, contact [support@baratza.com](mailto:support@baratza.com) or 425-641-1245.
- For all other countries, to find a retailer near you go to [www.baratza.com/international-importers-and-retailers](http://www.baratza.com/international-importers-and-retailers)

For detailed grinder information read the Manual found at [www.baratza.com/documentation](http://www.baratza.com/documentation)

**SAFETY INFORMATION:**

For more detailed grinder information read the Operations Manual found at [www.baratza.com/documentation](http://www.baratza.com/documentation)

Please read the information below very carefully. It contains important safety information for this appliance. Please keep these instructions for future reference.

- ! Use only with AC current and the correct voltage. See the label on the base of the grinder to determine the correct voltage.
- ! Only clean the grinder housing with a dry or slightly damp cloth.
- ! Do not use this grinder for anything other than its intended use (i.e. grinding whole roasted coffee beans).
- ! Baratza will not accept any liability for damage or injury if the grinder is used other than for its intended purpose or is improperly operated or repaired. All warranty claims will be void.
- ! Disassemble your grinder only as directed in the Care and Cleaning Section of this manual. If you cannot remedy a malfunction, check [www.baratza.com/troubleshooting](http://www.baratza.com/troubleshooting).
- ! Do not operate the grinder with a damaged cord or plug, or if the grinder malfunctions.
- ! Do not leave your grinder unattended while turned ON.
- ! Shut off and unplug the grinder from the electrical outlet when not in use and before cleaning.
- ! To unplug, grasp plug and remove from the outlet. Never pull on the cord.
- ! Keep your grinder out of the reach of children.
- ! Do not immerse the grinder, plug or cord in water or any other liquid.