

Vario Power Troubleshoot

Remove the hopper.

Plug the Vario in. The lights should flash, and the digital display should come on.

Press “Manual” then “Start” and the timer should start counting up. If it does not function properly, you need a replacement face plate. (See Faceplate/Shimming PDF for assistance)

Make sure the timer is counting up. Look in the machine at twelve o’clock and use your thumb to push the micro switch circled in red below. Make sure to keep your fingers out of the bean entrance! The lower burr should spin if the motor powers on.



If the motor powered on and the burr was rotating, make sure to use appropriate force when installing the hopper and rotating it clockwise. You should hear a slight click as it engages the micro switch. Also inspect the part of the hopper pictured below carefully for damage as this is what pushes in the switch.

