

How to Replace the Timer Switch on a Maestro Plus, Virtuoso, Preciso

Tools Needed- #2 Flathead screwdriver, Pliers, Phillips screwdriver

Remove the hopper, grounds bin, upper ring burr, silicone seal, and switch knob.

Remove the case (see other PDF for assistance).

Remove the safety switch by pulling it up and off the posts.



Remove the gearbox (3 Phillips screws)



Unplug the motor-

NEWER MODELS will unplug from the circuit board

OLDER MODELS will have spade clips on the bottom of the motor. The black wire goes to the spade clip that has a dog leg on the plastic (see below, we are pointing at it)



Remove the nut from the switch.



Transfer one wire at a time to the new switch.



Reinstall the switch and re assemble.